Need some help?
Call our toll free
Customer Helpline today!

FREE CALL **Customer Helpline** 1800 656 630

Or visit our website
www.westwell.com.au/olin

OLIN®
DPF-1006
10 INCH
DIGITAL PHOTO FRAME
USER MANUAL

FREE CALL
Customer Helpline
1800 656 630

WESTWELL
CONNECTING EAST TO WEST

Westwell Australia Pty Ltd
Westwell and its stylised logo are registered in the Australian IP office.
OLIN is a registered trademark of Westwell Australia Pty Ltd.
All rights reserved.
All promotional materials are offered for reference only.
Actual products may vary.

Table Of Contents

Thank you for purchasing this Digital Photo Frame. We hope that you enjoy viewing and sharing your pictures with all your friends and family!

Safety Warning---------- 2

Features---------- 3

Parts Introduction---------- 4
- Remote Control Introduction---------- 4
- Remote Control Installation---------- 5
- How to Use the Remote Control---------- 5
- Rear Panel Introduction---------- 5
- Memory Card Insertion ---------- 6
- Mini USB Port to connect to a Computer---------- 6

Main Menu Setup---------- 7
- Basic Operation---------- 7
- Photo Playback---------- 7
- Music Playback---------- 9
- Movie/Video Playback---------- 9
- File Navigation---------- 10
- Modifying the Settings---------- 11
- Calendar---------- 12

Troubleshooting---------- 13

Safety Warning

Safety Warning:

- The digital photo frame should be used indoors only.
- Use supplied power adapter only.
- To reduce the risk of fire of electric shock, do not expose this appliance to the rain or moisture.
- Do not block the ventilation holes on the back of the digital photo frame at any time.
- Keep your digital photo frame out of sunlight. Direct sunlight may cause damage.
- Do not splash or fill the digital photo frame with liquids.Keep clear of liquids.
- No objects filled with liquids,such as vases,shall be placed on the frame.
- Keep the LCD screen clean and treat it gently. Avoid touching the LCD directly.
  If you need to clean the LCD screen, please make sure the digital photo frame is switched off and the mains cable unplugged . And then use a soft cloth and spray the solutions on the soft
- cloth first(Use only LCD specific cleaner).
- Always position the digital frame on a suitable and level surface.
- The digital frame only complies with the voltage type specified on the back.
  Working Conditions:
  Operating Temperature: 0°C ~ +45°C
  Humidity:20% ~ 80%
- For an environmentally friendly operation and to save energy,please switch off the mains supply when the digital photo frame is not in use.
- The power device can be easily removed from or plugged into wall outlet.

Note:

In order to prevent damage to the memory card or the digital photo frame, please switch off your digital photo frame before removing your memory card.

FEATURES

Main Features

- 10. 2 Inch 16:9 TFT Screen
- Picture, audio, video playback: JPEG*/MP3/MPEG-4/Motion-JPEG
- Compatible with SD/MMC/MS/XD memory cards
- Earphone jack for headset connection
- Instantly plays Mp3music with built-in speakers
- Supports thumbnails mode and slide show
- An automatic,continuous slide show with background music lets you enjoy all of your photos with ease.
- Photo with multiple transition effects
- USB Host for connecting to the USB mass storage
- USB 2.0 high speed transmission for connecting to your computer to download the files.
- Time and date display,alarm clock are available
- Controlled by infrared remote control and buttons on the rear panel
- Built-in 2 X1.5W stereo speakers and with internal NAND memory(512MB)

Specifications

- Power: AC 100 ~240V, 50/60Hz input ;
  DC12V, 1A output
- Power Consumption: ≤9W
- Dimensions:315 X 223 X 40 mm.
- Speaker Output Power:1.5WX2
- Speaker S/N:≤60
- Weight: 0. 75kg
- Supports Audio Format: MP3
- Supports Photo Format:JPEG
- Supports Video: MPEG-4 & Motion-JPEG
- Supports Memory Cards: SD/MMC/MS/XD
- Supports USB : USB Host & USB Device Ports

Packing

Please check and identify the contents of the box of your player package, as listed below:

• Digital Photo Frame	1PC
• User's Manual	1PC
• Remote Control	1PC
• Button Battery(For the remote Control)	1PC
• Power Adapter	1PC
• Stand	1Set
• Warranty Certificate	1PC

*JPEG/JPG has to be saved in RGB, this is standard for all cameras.

PARTS INTRODUCTIONS

Remote Control Introduction

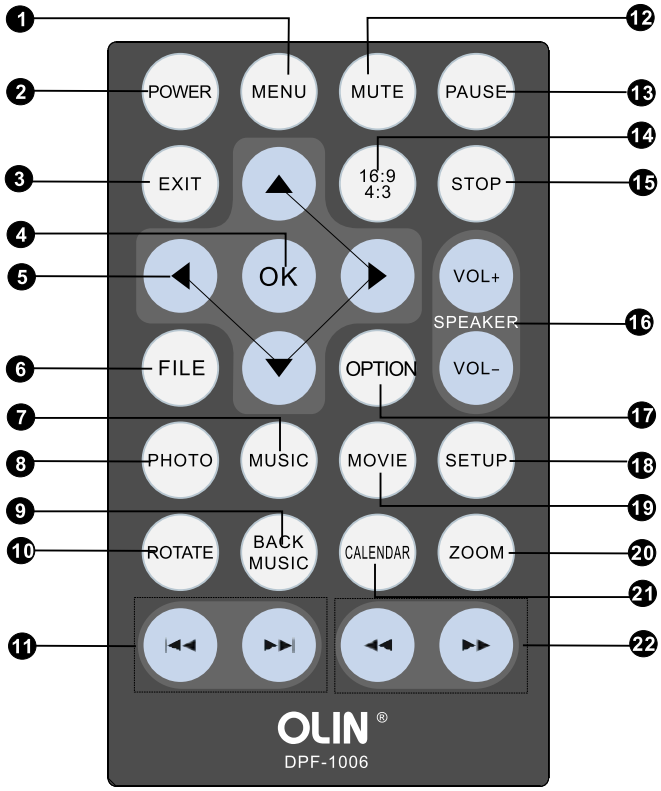

1. MENU-To access the main menu.
2. POWER-Switch the digital photo frame to either standby or ON.
3. EXIT-To stop the current the playback and return to the previous menu.
4. OK-To start the playback or to confirm selections.
5. Direction Buttons(▲▼◀▶)-To select menu items or settings.
6. FILE-To access the file overview menu.
7. MUSIC-Automatically play music if present in the memory card /USB drive/ internal memory.
8. PHOTO-Automatically play images as a slide show.
9. BACKMUSIC-To play background music(MP3) during a photo slide show.
10. ROTATE-To rotate the orientation of the images while displaying photos.
11. I◀◀ / ▶▶I(PREV& NEXT)-Skips to the previous or next photo page,track or video file.
12. MUTE-To turn off the speaker/pressing it again turns MUTE off.
13. PAUSE-To pause the playback.
14. 16:9/4:3-Switch the aspect ratio of the displayed images.
15. STOP-To stop the playback.
16. VOL+/- -To adjust the volume level.
17. OPTION-On Screen display.
18. SETUP-To access the photo frame setting menu.
19. MOVIE- To play the movie/video stored in the memory card/USB drive/ internal memory .
    ** The mode selection icon of such function appears in interface as "VIDEO".
20. ZOOM-To zoom in the display image/video.
21. CALENDAR-To access the calendar display menu.
22. ◀◀ / ▶▶(REV&FWD)-To fast rewind or forward search.

PARTS INTRODUCTIONS

Remote Control Battery Installation

Remove the button battery compartment cover.Insert the button battery（make sure the polarities of the battery match correctly）. Replace the button compartment cover.

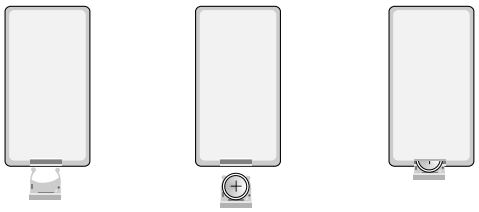

How to use the remote Control

After battery installation, direct the remote control towards the remote sensor on the frame's front panel. The remote control is operational within a distance of 2m.

Note:

- When using the remote control, make sure no obstacles are placed between the remote control and remote sensor.
- The battery normally lasts around one year. When not using the frame for long periods of time, remove the battery.
- Dispose of used battery according to the local ordinance regulations.

Rear Panel

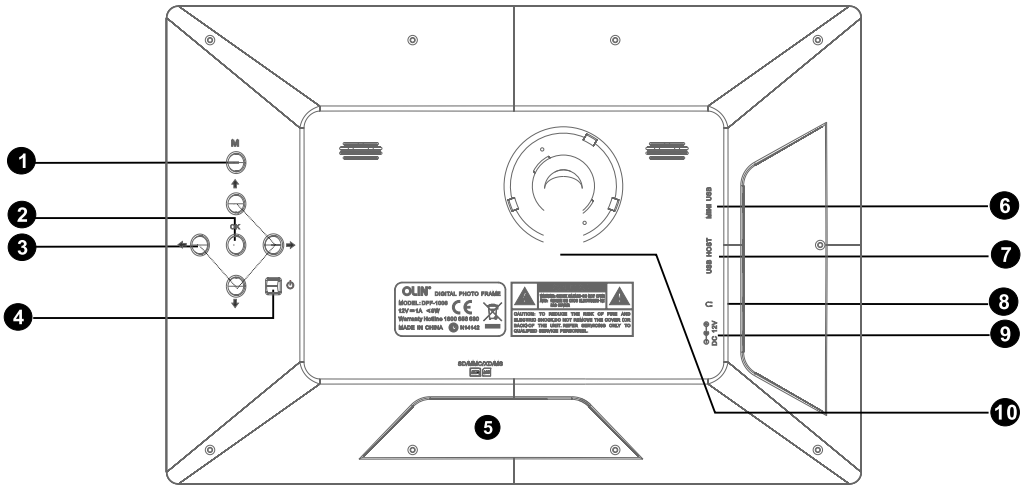

1.M:To access the main menu.
2.OK Button
3.Direction Buttons
4.⏻: Press and hold about 5 seconds to turn on or off the photo frame.
5.SD/MMC/MS/XD Slot
6.Mini USB Port:To connect to a computer
7. USB Port: To connect to an external USB device
8. Earphone Jack
9. DC 12V,1A Jack
10. Stand

Note:

When inserting the memory card, please make sure the card's label FACES AWAY from the LCD display.

PARTS INTRODUCTIONS

Memory Card Insertion

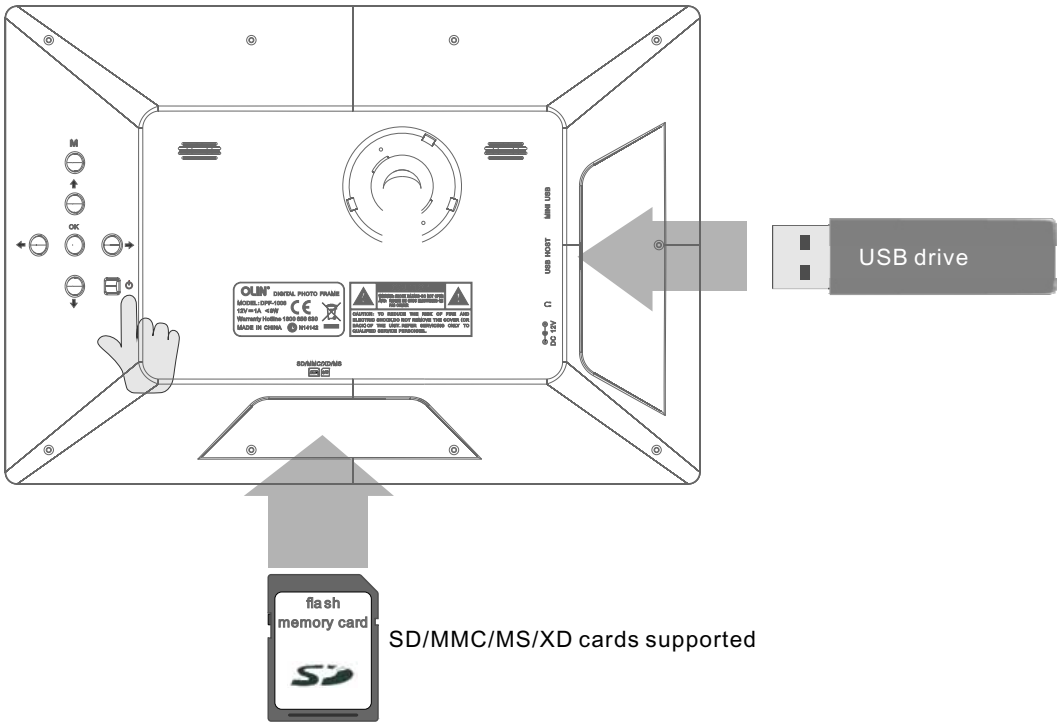

Note:

- Please make sure the digital photo frame is powered off when removing the memory card.
- When inserting the memory card, please hold the memory card by its edges and gently insert it into the appropriate slot (make sure the card's label FACES AWAY from the LCD display).
- Make sure there is at last one available file on the memory card.
- The USB HOST port supports USB flash drives for instance MP3/MP4 player or USB memory sticks.

Mini USB Port (for connection to a Computer)

Using the USB cable (not supplied), you can connect your digital photo frame to a computer to transfer files between the two devices.

- Connect the mini plug of the USB cable to the mini USB port on the digital photo frame, and the other end to your computer.
- Turn the digital photo frame on and allow the computer a few moments to recognize the device.The photo frame will also display a message stating that the connection has been established to a computer.
- Once connected to the computer, any memory cards inserted in the digital photo frame will appear as external storage devices on the computer.
- Then you can transfer files between the computer and the photo frame's internal memory, or other memory devices inserted in the photo frame through normal copy-and-paste or drag-and-drop methods.
- Follow the Safety Remove Instructions to disconnect the USB cable to the computer.
- After disconnecting from the computer the frame starts the photo slide show automatically.

Note:

- When connecting with a computer, the USB HOST drive is not available.
- When copying or transferring the files to the card/internal memroy, in the photo frame , do not disconnect the USB cable or remove the card.
- Make sure your computer is running Windows 2000 or above, e.g. Windows XP or Vista, with USB port supported.Mac system is not supported.

Main Menu Setup

Basic operation

1. Once removed from the package, attach stand to frame by placing it in the slot in the rear of the frame, fully push in and gently rotate to a stable position, then the frame can be securely place on a flat surface.
2. Insert the supplied adapter DC plug into the frame, then plug the adapter into a stand- and outlet.
3. Press and hold the ⏻ button on the rear for 5 seconds to power on the frame and the main menu will be displayed after the start-up screen has been shown.

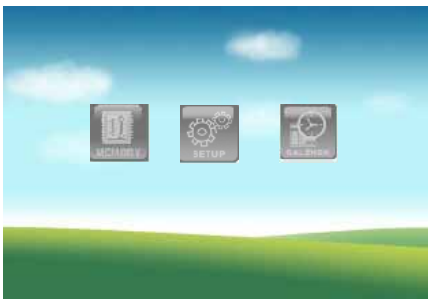

Note:
Once a memory device is inserted into the digital photo frame, the co-rresponding icon can be selected.

4. Insert the available memory card or USB drive into the corresponding slot, a slide show will start automatically. Press the MENU button to return to the main menu.
5. In the main menu, you can selected the inserted source to enjoy photo/music/movie, change the frame setting or display the calendar. Use the ◀ or ▶ button to highlight an item that you want to enter and press the OK button to enter the sub-menu.

Note:

If there are available images/AV files in the internal memory or inserted device, you can enjoy the photo/music/movie or overview the file information just by pressing the respective button (PHOTO/MUSIC/MOVIE/FILE) on the remote control directly.

Photo Playback

To view photo, make sure supported image files are loaded onto the storage device. A slideshow will start automatically when the storage device is connected. To preview image in thumbnail list, press the MENU button to return to main menu and follow the instructions below.

Viewing Thumbnails

1. After the above basic operation,you can use the ◀ or ▶ direction button to highlight USB/SD/ Memory icon on the main menu and press the OK button to confirm.
2. The screen will display the mode selection screen.There are four modes are available:Movie, Music,Photo and File.

3. Use the ◀ or ▶ button to highlight the Photo icon(the third icon) and press the OK button to confirm.A screen with 15 thumbnail images per page will appear.
4. Navigating among the images using the ▲▼◀▶ button. To skip to the previous or next image page, press the ⏮ or ⏭ button.
5. To return to the main menu, press the MENU button.

Running a slide show

In thumbnails mode, use the ▲▼◀▶ button to highlight an image and press the OK button to start slide show.

- Press the EXIT/STOP button to return to the thumbnails screen.
- If music in MP3 format is stored in the same memory card and in the same folder as that of the photos then you can play a background music for the slide show, press the BACK MUSIC button to start or stop the background music playback.
- Use the VOL + or VOL- button to increase or decrease the volume of the background music.
- Press the MENU button to return to the main screen.

Note:

- For changing the transition effects or time interval for slide show, please follow the SETUP chapter instructions.
- In any mode, press the PHOTO button to start a slide show automatically.

Viewing a single image

During a slide show, you can view a single image by pressing the PAUSE button.

- Press the ⏮ or ⏭ button to skip to the previous or next image.
- Press the PAUSE button again to enter slide show mode.
- Press the EXIT/STOP button to return to the thumbnails screen.

On Screen Display

During a photo slide show, pressing the OPTION button on the remote will display a menu on the screen, the functionalities of each icons on this menu is described below.

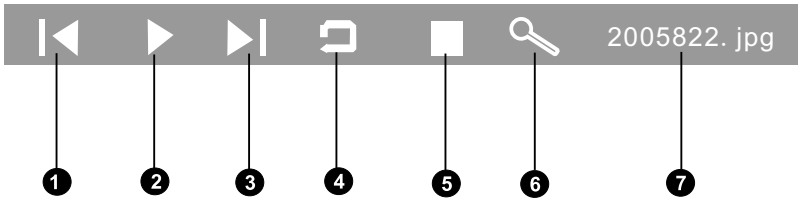

1. Return to the previous image.
2. To play/pause the playback.
3. Go to next image
4. To rotate images
5. To stop the play and return to the thumbnail screen.
6. To zoom in the image
7. Photo file name

The menu icons can be navigated using the ◀ or ▶ button and activated by pressing the OK button.

Zoom In An Image

An image can be zoomed in using the ZOOM button on the remote control.
Repeatedly pressing this button will ZOOM in to various levels and finally return to the original image.Use the direction buttons to move the image for viewing in zoom in mode.
Press the PAUSE button to resume normal playback.

Rotate Photos

When a single image is displayed, you can rotate the image using the ROTATE button on the remote control and finally return to original image. Every time you press this button, the image rotates 90 degrees clockwise. Press the PAUSE button to resume the slide show.

Changing Aspect Ratio

The frame has a wide screen with 16:9 aspect ratio. However most of the consumer camera's take picture in 4:3 aspect ratio. The frame's default setting is to show slide show in full screen mode with out distorting the image.

Due to automatic resizing in full screen mode (16:9 mode), the image's top/bottom/side details will not be visible.

Alternatively if you prefer to view the images in 4:3 aspect ratio, pressing the 4:3/16:9 button on the remote control will change the display aspect ratio to 4:3. This will result in images appearing in the middle of the screen with black bars on both the sides.You can alternate aspect ratio

You can alternate aspect ratios between 16:9 and 4:3 by repeatedly pressing this button on the remote control.

Music Playback

Before you can enjoy music, please make sure there are MP3 file(s) on the internal memory or inserted device.

1. From the main menu to choose the inserted device and then choose Music icon on the four mode selection screen.
2. Press the OK button to enter music files preview menu.
3. This will list the files and folders present in that memory card. Highlight a music using the ▲or ▼ button and then press the OK button to start the playback.
4. To change a new music for playback, press the ⏮ or ⏭ button. Repeatedly pressing the ◂◂ or ▸▸ button to enter fast backward or forward playback, pressing the PAUSE button on the remote control will revert to play.
5. To adjust the volume, press the VOL+/VOL- button. Using the MUTE button to mutes or unmutes the sound.
6. Repeatedly pressing the PAUSE button will pause or resume the playback.
7. Press the STOP button to stop the current playback.

Note:

- The frame supports three selection repeat playback modes: Repeat All, Repeat One and Repeat Off. For changing the repeat mode, please follow the SETUP chapter instructions.
- The frame will start the music playback automatically by pressing the MUSIC button on the remote control.

Movie/Video Playback

You can watch the movies/videos on the digital photo frame. It supports the format of MPEG-4 and Motion-JPEG used by most digital cameras.

Note:

- The frame will start the movies/videos playback automatically by pressing the MOVIE button on the remote control .

1. From the main menu, select your desired plugged-in device, and then choose VIDEO(Movie) icon on the mode selection screen.
2. Press the OK button to enter movie/video files preview menu.
3. Highlight a video file using the ▲ or ▼ button and then press the OK button to start the playback.
4. To change a new movie/video file for playback, press the ⏮ or ⏭ button. Repeatedly pressing the ◂◂ or ▸▸ button to enter fast backward/forward playback, pressing the PAUSE button on the remote control will revert to PLAY.
5. To adjust the volume, press the VOL+/VOL- button. Using the MUTE button to mutes or unmutes the sound.
6. Repeatedly pressing the PAUSE button will pause or resume the playback.
7. Press the STOP button to stop the current playback.
8. Pressing the OPTION button on the remote control during the movie/video playback will display the info bar as following:

Main Menu Setup

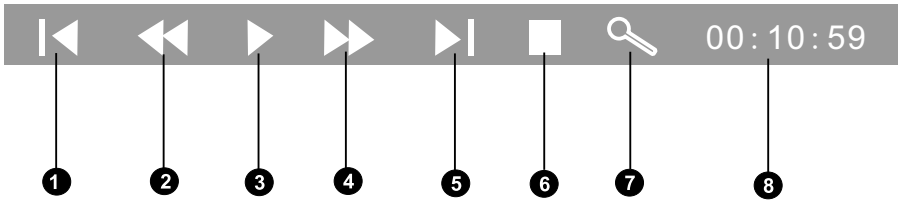

1. Return to the previous video file.
2. Fast Backward
3. To play/pause the playback.
4. Fast Forward
5. Go to the next video file.
6. To stop the current playback and return to the file list.
7. To zoom in the video.
8. Playback time display.

File Navigation

In the file navigation menu, you can examine the content of the storage device.

1. From the main menu to choose the USB/SD/MEMORY icon and then press the OK button, this will bring the four mode selection screen, choose the File icon and press the OK button to enter the file management menu.
2. Use the▲or▼ button to highlight a file, the information of the file will be shown on the right of the screen.
3. Press the OK button to start playing the Photo/Music/Movie.

Note:

In any mode, the frame will display the file navigation menu directly by pressing the FILE button on the remote control.

To copy/delete files on the memory cards

Files can be copied between memory cards or between the internal memory of the photo frame and memory cards without a computer by following the steps below.

Make sure that the memory devices that you want to transfer files are connected to the photo frame.

1. Select the inserted memory card from the main menu and press the OK button to enter the four mode selection screen.
2. Highlight the File icon and press the OK button to enter the file management menu.
3. Highlight a file using the ▲ or ▼ button to copy/delete .
4. Press the ▶ button on the remote control (or press the ◀ button located on the rear panel of the frame) , a paw will appear against the file to indicate that the file has been selected for copying. Press the ▶ button on the remote control (or press the ◀ button located on the rear panel of the frame) to cancel the selected. To copy multiple files at once, repeat step 3 and step 4.
5. Press the OPTION button on the remote control, COPY or Delete icons will appear. Select one.

➢ **If Select Copy,** icons of all memory devices connected will appear.

1. Use the ▲ or ▼ button to highlight the device to copy to. Press the ▶ button on the remote control (or press the ◀ button located on the rear panel of the frame) to enter the selected device and select a folder by the ▲ or ▼ button.
2. Press the OK button to start copying.
3. The file will be copied and a message confirming this will appear on screen.
4. Press the OK button to dismiss the message and turn to file navigation menu.

➢ **If selected Delete**, select ☑ icon to deleted the selected file(s). Select ☒, to cancel this operation.

Main Menu Setup

Modifying the Settings

The system settings let you customize and configure your digital photo frame.

1. Select the SETUP Icon in the main menu and confirm with the OK button.
2. Use the ▲ or ▼ button to select the setting you would like to allocate on the left side of the screen.
3. Confirm with the OK button.
4. Set the new setting using the ◀ or ▶ button.
5. Press the EXIT button to return to the previous menu.

You can allocate the following settings.

Language-

Supports English on-screen display only.

Slide Show Time-

Allows you to change the time delay from the available list during slide show.

Transition Effect-

Allows you to choose different styles of slide show effects from the available list such as 3D_Flip, 3D_Cube, 3D_Switch and so on.

Music/Movie Repeat Mode-

Allows you to choose different repeat mode for music/movie file playback.

Repeat One: To have each individual music/movie files repeat continuously.

*Repeat All:*To have all music/movie files repeat continuously.

*Repeat Off:*To have music/movie files played only once.

Display Mode-

Switch the image display effect between 16:9 and 4:3.

Select 16*:*9: to have your images fille the screen (some cropping may occur).

Select 4*:*3: to change the display aspect ratio to 4:3. This will result in images appearing in the middle of the screen with black bars on both the sides.

Time-

Setting the time and date here reflects in the calendar menu.

- Select the Time item from the setup menu.
- Highlight the desired setting sub-item using the ◀ or ▶ button.
- Repeatedly press the ▲ or ▼ button to change the setting.
- Confirm with the OK button.

Alarm-

Allows you to use the frame as an Alarm clock. The alarm can be set to ring at a specific time. Set the ring volume on the settings menu. Use the VOL+/VOL- and MUTE button on the remote control to adjust the alarm volume when ringing.For alarm time setting steps please follow the Time setting instructions.

***OFF*:** Disable the alarm function.

Every: The digital photo frame will ring at the required set time every day.

Once: The digital photo frame only rings at the pre-set time once.

Brightness, **Contrast**-

This setting allows you to change the setting of LCD screen.Higlight the brightness or contrast icon and then repeatedly press the ◀ or ▶ button to adjust the brightness or contrast of the LCD screen, press the OK button to confirm and exit from the current setting.

Screen Saver-

screen saver will be displayed to prevent potential damage to the LCD screen when there is no activity of the frame within a preset time.

OFF: To disable the screen saver.

Default-

To restore all the settings to the factory default.

Main Menu Setup

Calendar.

You can switch the digital photo frame to Calendar mode so that the current date and time is displayed on the screen.

1. Use the ◀ or ▶ direction button to highlight CALENDAR icon in the main menu;
2. The calendar and clock will be displayed by pressing the OK button. You can access the calendar screen by pressing the CALENDAR button at any time. The date and time can be adjusted in the Settings section.
3. Press the EXIT button to exit the Calendar mode.

TROUBLESHOOTING

Problem	Solution
Frame doesn't power up.	Check mains supply cable is properly connected and powered on. Try to press the power button and hold for 5 seconds to power on the frame.
Unable to play background music for slide show.	Check whether the music file is in the same memory device , and in MP3 format.
No Audio	Check whether the audio files are of MP3 format.
No sound.	Check whether the volume is set at 0. If so, press the MUTE button to unmute the sound or press the VOL+ button to increase the volume.
Unable to display or download files.	Make sure the file format is supported or the computer and the digital photo frame are in correctly connected, or memory card is not damaged.
Remote Control does not work.	Make sure there is no obstacle between the remote control and remote control receiver window. Replace the battery.

Note:

When you have plugged in your memory card and power source correctly, and the start-up screen displays properly, but it can not read the content on the card, re-insert the card, or format it(back up the files before this procedure).
If problem persists, please turn off the power and contact our customer support.

WEEE Directive



Waste Electrical and Electronic Equipment Directive.
If at any time in the future you should need to dispose of this product, please note that Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Copyright

This manual contains information protected by copyright law. No part of this document may be used or reproduced in any form or by any means, or stored in a database/retrieval system without prior written permission from Westwell Australia Pty Ltd

The information of this manual is based on the current version of the product, we reserve the right to alter the content without prior notice.

All brand names in this manual are property of their respective owners.